



# ML931 / ML941 SET-UP GUIDE

## SETTING UP YOUR MEDIASITE ML MULTIVIEW RECORDER

### 1. CONNECT VIDEO SOURCE(S)

#### ML931

- A. Connect a 3G/HD/SD-SDI video source to an open SDI port.
- B. Connect an SD video source to the S-Video/Composite port.

#### ML941

- C. Connect an HDMI video source to the HDMI port.
- D. Connect a 3G/HD/SD-SDI video source to the SDI port.
- E. Connect an SD video source to the S-Video/Composite port.

### 2. CONNECT A CONTENT (SLIDE) SOURCE

Connect the appropriate adapter to the HDMI/DVI/RGB/YPbPr port. Then connect your laptop, white board, document camera or any content source to the adapter.

### 3. CONNECT THE AUDIO SOURCE

Connect the breakout cable to the Recorder. Then connect an audio source to the appropriate connector on the breakout cable. **If you are using embedded SDI or HDMI audio, no additional audio source is required.**

### 4. TURN ON SOURCES

### 5. CONNECT THE RECORDER TO THE NETWORK

### 6. CONNECT THE POWER CABLE


Connect the power cable to the Recorder and then plug into a power source.

### 7. POWER ON THE RECORDER

The power button is located on the left side of your ML Recorder (not shown).

#### ADDITIONAL FEATURES

On the back of your ML Recorder is an embedded handle, an adjustable kickstand for desktop placement and a Kensington Security Slot.

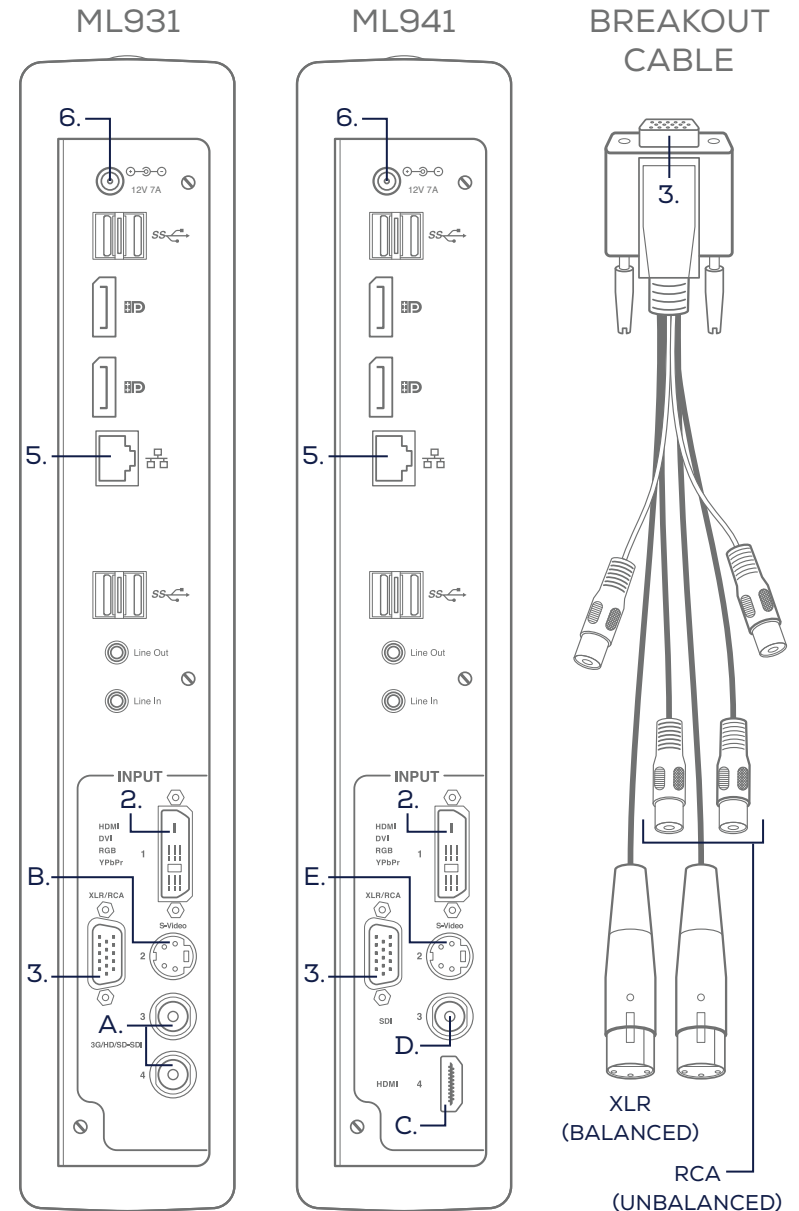

# CONFIGURING YOUR ML931 / ML941

## 1. CONNECT THE RECORDER TO MEDIASITE

Open the Recorder Interface on your ML Recorder and go to the **Settings** page. Click **Mediasite Connections**. Enter your Mediasite's Service URL and the credentials you need to connect to it. You will get this information from your Mediasite administrator.

## 2. LICENSE THE RECORDER

Click **Unlicensed** in the upper-right corner to acquire a license from the connected Mediasite Video Platform. Restart the Recorder when prompted.

### LICENSING REQUIRED

You cannot record presentations with an unlicensed Recorder.

## 3. VERIFY YOU HAVE THE LATEST RECORDER SOFTWARE

When your Recorder restarts after licensing, it automatically checks for software updates on the connected Mediasite Video Platform and Sonic Foundry's Customer Assurance Portal. Return to the **Settings** page, click **System**, enter the default Recorder administrator credentials (Admin/mediasite), and go to **Software Update** to see if any updates are available:

### UPDATES AVAILABLE ON MEDIASITE

Click **Apply Updates** to install the latest updates. The Recorder reboots once all updates have been applied.

### UPDATES AVAILABLE ON CUSTOMER ASSURANCE PORTAL

If newer software updates are available on the Customer Assurance Portal, you will see a download link. Click the link and enter your organization's credentials to download the software to a location accessible from the Recorder. You will then upload the software and update the Recorder. The Recorder reboots once all updates have been successfully applied.

If you do not know your organization's Customer Assurance Portal credentials, contact your Mediasite administrator.

## 4. SELECT YOUR SOURCES

On the **Input Devices** page, select the appropriate video and audio inputs.

## 5. PREVIEW INPUTS

Go to the **Recorder** page to preview your inputs. Monitor incoming audio levels and adjust them using the audio level fader (analog only). Monitor the incoming video and content sources and adjust your equipment settings to get the desired effect.

## 6. START RECORDING

Once you are satisfied with the inputs, you can begin recording. It is always a good idea to record and review a test presentation. For additional information:

### RECORDER HELP

Click **Help** when logged into the Recorder for information on managing your Recorder and recorded content.

### CUSTOMER ASSURANCE PORTAL

Go to the Customer Assurance Portal at [www.sonicfoundry.com/support](http://www.sonicfoundry.com/support) to download the **Mediasite Recorder Guide**, which contains additional information on managing your Recorder and recorded content. Contact your Mediasite administrator for your organization's credentials.

## ML931 / ML941 QUICK REFERENCE

	ML931	ML941
<b>DVI-I INPUTS</b>		
HDMI, DVI-D, RGB (VGA), YPbPr (Component)	1	1
<b>S-VIDEO/COMPOSITE INPUTS</b>		
S-Video/Composite	1	1
<b>3G/HD/SD-SDI INPUTS</b>		
3G/HD/SD-SDI	2	1
<b>HDMI INPUTS</b>		
HDMI	0	1
<b>AUDIO INPUTS</b>		
HDMI (Embedded)	1	2
RCA (Unbalanced)	1	1
XLR (Balanced)	1	1
SDI (Embedded)	2	1
<b>INCLUDED EQUIPMENT</b>		
HDMI to DVI-I adapter	1	1
RGB (VGA) to DVI-I adapter	1	1
YPbPr (Component) to DVI adapter	1	1
Composite to S-Video adapter	1	1
Audio breakout cable (XLR and RCA)	1	1
Power cable	1	1
DC power adapter	1	1
<b>POWER REQUIREMENTS</b>		
Power	84W	84W
Input frequency	50-60Hz	50-60Hz
AC voltage input	100-240V	100-240V
Max heat dissipation	326 BTU/h	326 BTU/h



getinfo@sonicfoundry.com | 608.443.1600 | #videodoneright